


Car alarm system with voice alert

elfinX

**VOICE
ALERT**

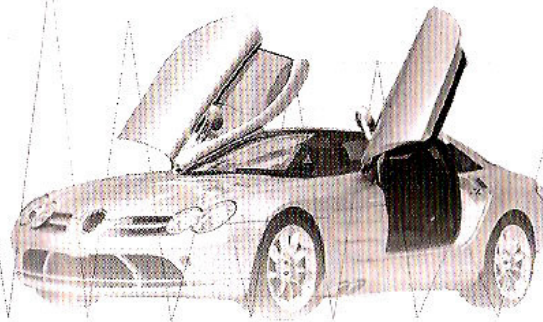

INSTRUCTION MANUAL

INTERNATIONAL CERTIFICATIONS OBTAINED IN THE PAST 12 YEARS



www.elfinx.com

SMS051208



MANUAL INSTRUCTION FOR CAR ALARM SYSTEM WITH VOICE ALERT

Function instruction

1. Arming with sound

Press **[M]** button, siren sounds for a short time, turning lights flash once, LED flashes and doors lock, there is a sound speaking "Armed!". 3 seconds later, the system will enter arming status with sound and light, the engine is disabled. (Inspecting shock, ACC and side doors after 3 seconds.)

A. Slight shocking: There is a sound speaking "Keepaway!", turning lights flash 5 times.

B. Heavy shocking: Siren sounds for 27 seconds and turning lights flash simultaneously for 27 seconds.

2. Mute-arming

Press **[M]** button, turning lights flash once and LED flashes, 3 seconds later, the system will enter mute arming status automatically, the engine is disabled.

A. Slight shocking: Turning lights flash 5 times and siren doesn't sound.

B. Heavy shocking: Turning lights flash for 27 seconds and siren doesn't sound.

3. Disarming

Press **[M]** button once, siren sounds two short beeping (Siren doesn't sound in mute arming.) Turning lights flash twice, there is sound speaking "Disarmed!". The doors will lock when disarming successfully.

4. Vehicle locator / Emergency call

A. Car locator: In arming status, press **[L]** button, siren sounds 15 times, turning lights flash 15 times. Repress **[L]** button to stop it.

B. Emergency call: In driving, press **[L]** button, siren sounds for 15 seconds, turning lights flash for 15 seconds, enabling the emergency call to be achieved. Repress **[L]** button to stop it.


5. Emergency call

In arming status, when ACC or door open is triggered, siren will sound for 27 seconds, turning lights will flash simultaneously for 27 seconds. The



vehicle can't be started.

6. Trunk release (The vehicle must have the motor of remote trunk.)

In any status, press  button for 2 seconds, trunk release automatically.

7. Reminder of un-closed door

After the system is armed, if the doors are not close properly, there is sound speaking "Please close the door!" to remind the owner of the doors not being closed properly. If the door is not close properly in 30 seconds, the system will alarm.

8. Auto central locking

A. In driving, 15 seconds later, step on the foot brake, the doors will be locked automatically.

B. When the engine is extinguished, the doors will be unlocked automatically.

C. In driving, press  button, the doors will lock automatically. Press  button, the doors will unlock automatically.

9. Emergency override

In case the remote controller is lost or damaged, insert the original key into ACC cylinder, press the learning button in the main unit to release the arming state.

10. Remote controlled learning

In case the remote control is lost or damaged, you can register new remote control to the main unit with the help of the code learning function.

Method: In disarming status, open the door, insert the original key to into ACC and turn it to ON position. Then press learning button for more than 3 seconds, siren sounds rapidly 3 seconds, turning lights remain on. Press any button of new remote control once, siren sounds a short beeping, confirming that the remote control has been learned successfully. Repeat the procedure as above to learn the second remote control. Up to 3 remote controls are permitted to set in this unit. The new and previous remote control must be learned simultaneously again and the lost remote control will be permanently invalid to secure the vehicle. (Warning: If The new and previous remote control are not learned simultaneously again, the lost remote control will still available.)

11. Auto rearming

If door is not opened within 25 seconds after the system is disarmed, the system will regard it as false disarming and resume primary arming status automatically. It will also lock to prevent false disarming.

12. Power cutting off memory

If the system's power is cut off, whenever the time is long or short, it will resume to arming status automatically after reconnecting the power in




5 seconds.


13. LED indicator

In arming status, LED flashes slowly.

If the system is shocked, ACC or doors are triggered, LED flashes rapidly.

14. Emergency call (anti-hijacking)

In driving, press  button once, turn lights flash, LED flashes rapidly.

Then press the  button again, the system will enter anti-hijacking stage.

After 15 seconds engine will extinguish, siren will sound and turning lights will flash rapidly.

15. When reversing the car, there is a sound speaking (Attention please It is reversing!)


16. Electric and pneumatic door locks (CN1 Factory default setting is electric door lock)

After cutting off the power supply, open the main unit box, change the position of the jumpers.

17. Setting voice alert and deleting voice alert (CN2 Factory default setting is with voice alert.)


After cutting off the power supply, open the main unit box, change the position of the jumpers.

18. Valet mode setting


In disarming status, turn the key to ACC/ON position, step and hold the foot brake, press the  button for more than 3 seconds. Siren sounds once, confirming that valet mode is turned off; siren sounds twice, confirming that valet mode is turned on.

Note: After setting the valet mode, the system is only with doors locking or unlocking function.

19. ON/OFF Voice alert function (optional)

In disarming status, turn the key to ACC/ON position, step and hold the foot brake, press the  button 3 times. Siren sounds once, confirming that voice alert function is turned off; siren sounds twice, confirming that voice alert function is turned on.

20. ON/OFF Side door light flashing function

In disarming status, turn the key to ACC/ON position, step and hold the foot brake, press the  button for more than 3 seconds. Siren sounds once, confirming that the function of side door flashing is turned off; siren sounds twice, confirming that the function of side door flashing is turned on.